


Browning Citori Type I Shotgun

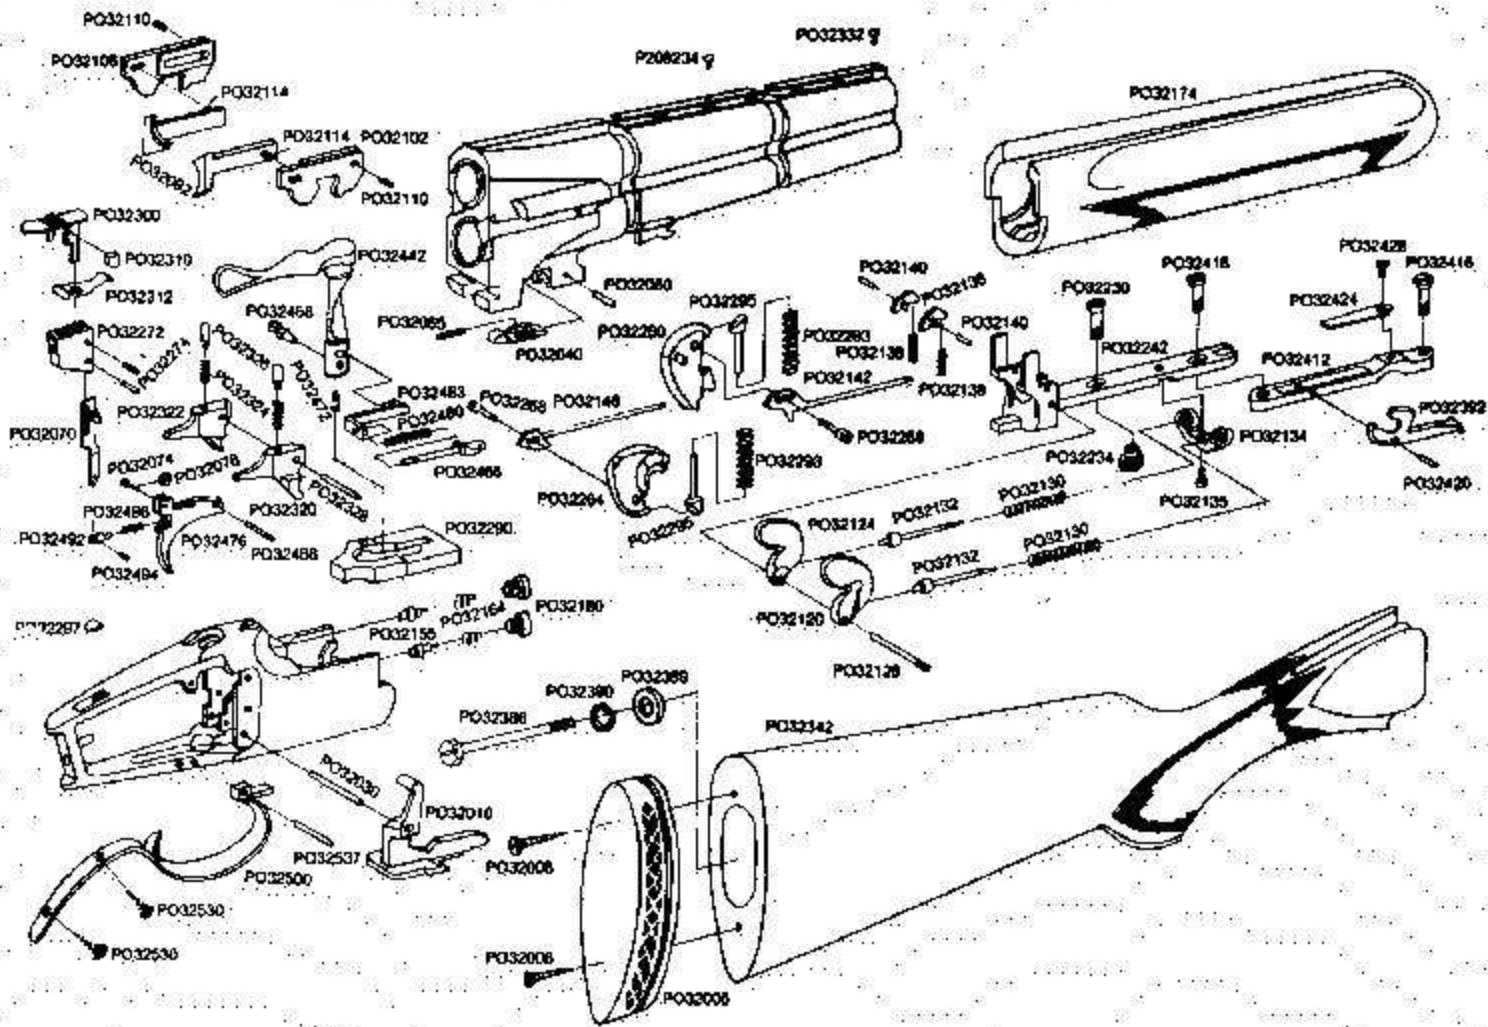

- | | | | | | |
|---------|--------------------------------------|---------|---------------------------|---------|-------------------------------------|
| P032005 | Butt Pad | P032142 | Ejector Trip Rod, Right | P032388 | Stock Bolt |
| P032008 | Butt Pad Screws (2) | P032146 | Ejector Trip Rod, Left | P032389 | Stock Bolt Washer |
| P032010 | Cocking Lever | P032155 | Firing Pin | P032390 | Stock Bolt Lock Washer |
| P032030 | Cocking Lever Pin | P032160 | Firing Pin Bushing (2) | P032392 | Takedown Lever |
| P032040 | Cocking Lever Lifter | P032164 | Firing Pin Spring (2) | P032412 | Takedown Lever Bracket |
| P032060 | Cocking Lever Lifter Pin | P032174 | Fore-end | P032416 | Takedown Lever Bracket Screw, Front |
| P032085 | Cocking Lever Lifter Spring | P032230 | Fore-end Screw | P032418 | Takedown Lever Bracket Screw, Rear |
| P032070 | Connector | P032234 | Fore-end Screw Escutcheon | P032420 | Takedown Lever Pin |
| P032074 | Connector Pin | P032242 | Fore-end Bracket | P032424 | Takedown Lever Spring |
| P032076 | Connector Pin Retaining Ring | P032260 | Hammer, Right | P032428 | Takedown Lever Spring Screw |
| P032082 | Ejector, Right & Left | P032264 | Hammer, Left | P032442 | Top Lever |
| P032102 | Ejector Extension, Right | P032268 | Hammer Pin | P032460 | Top Lever Spring |
| P032106 | Ejector Extension, Left | P032272 | Inertia Block | P032463 | Top Lever Spring Retainer |
| P032110 | Ejector Extension Screw | P032274 | Inertia Block Pin | P032466 | Top Lever Spring Plunger |
| P032114 | Ejector Retaining Pin | P032280 | Locking Bolt | P032468 | Top Lever Dog |
| P032120 | Ejector Hammer, Right | P032293 | Mainspring | P032472 | Top Lever Dog Screw |
| P032124 | Ejector Hammer, Left | P032295 | Mainspring Plunger | P032476 | Trigger |
| P032128 | Ejector Hammer Pin | P032297 | Mainspring Receiver | P032488 | Trigger Pin |
| P032130 | Ejector Hammer Spring | P032300 | Selector Safety | P032482 | Trigger Piston |
| P032132 | Ejector Hammer Spring Plunger | P032310 | Selector Block | P032484 | Trigger Piston Pin |
| P032134 | Ejector Hammer Spring Receiver | P032312 | Selector Spring | P032486 | Trigger Piston Spring |
| P032135 | Ejector Hammer Spring Receiver Screw | P032320 | Sear, Right | P032500 | Trigger Guard |
| P032136 | Ejector Sear | P032322 | Sear, Left | P032530 | Trigger Guard Screw |
| P032138 | Ejector Sear Spring | P032324 | Sear Spring | P032537 | Trigger Guard Pin |
| P032140 | Ejector Sear Pin | P032326 | Sear Spring Plunger | P032534 | Sight Bead, Middle |
| | | P032328 | Sear Pin | | |
| | | P032332 | Sight Bead, Front | | |
| | | P032342 | Stock, Field | | |