


Model B-92 Rifle

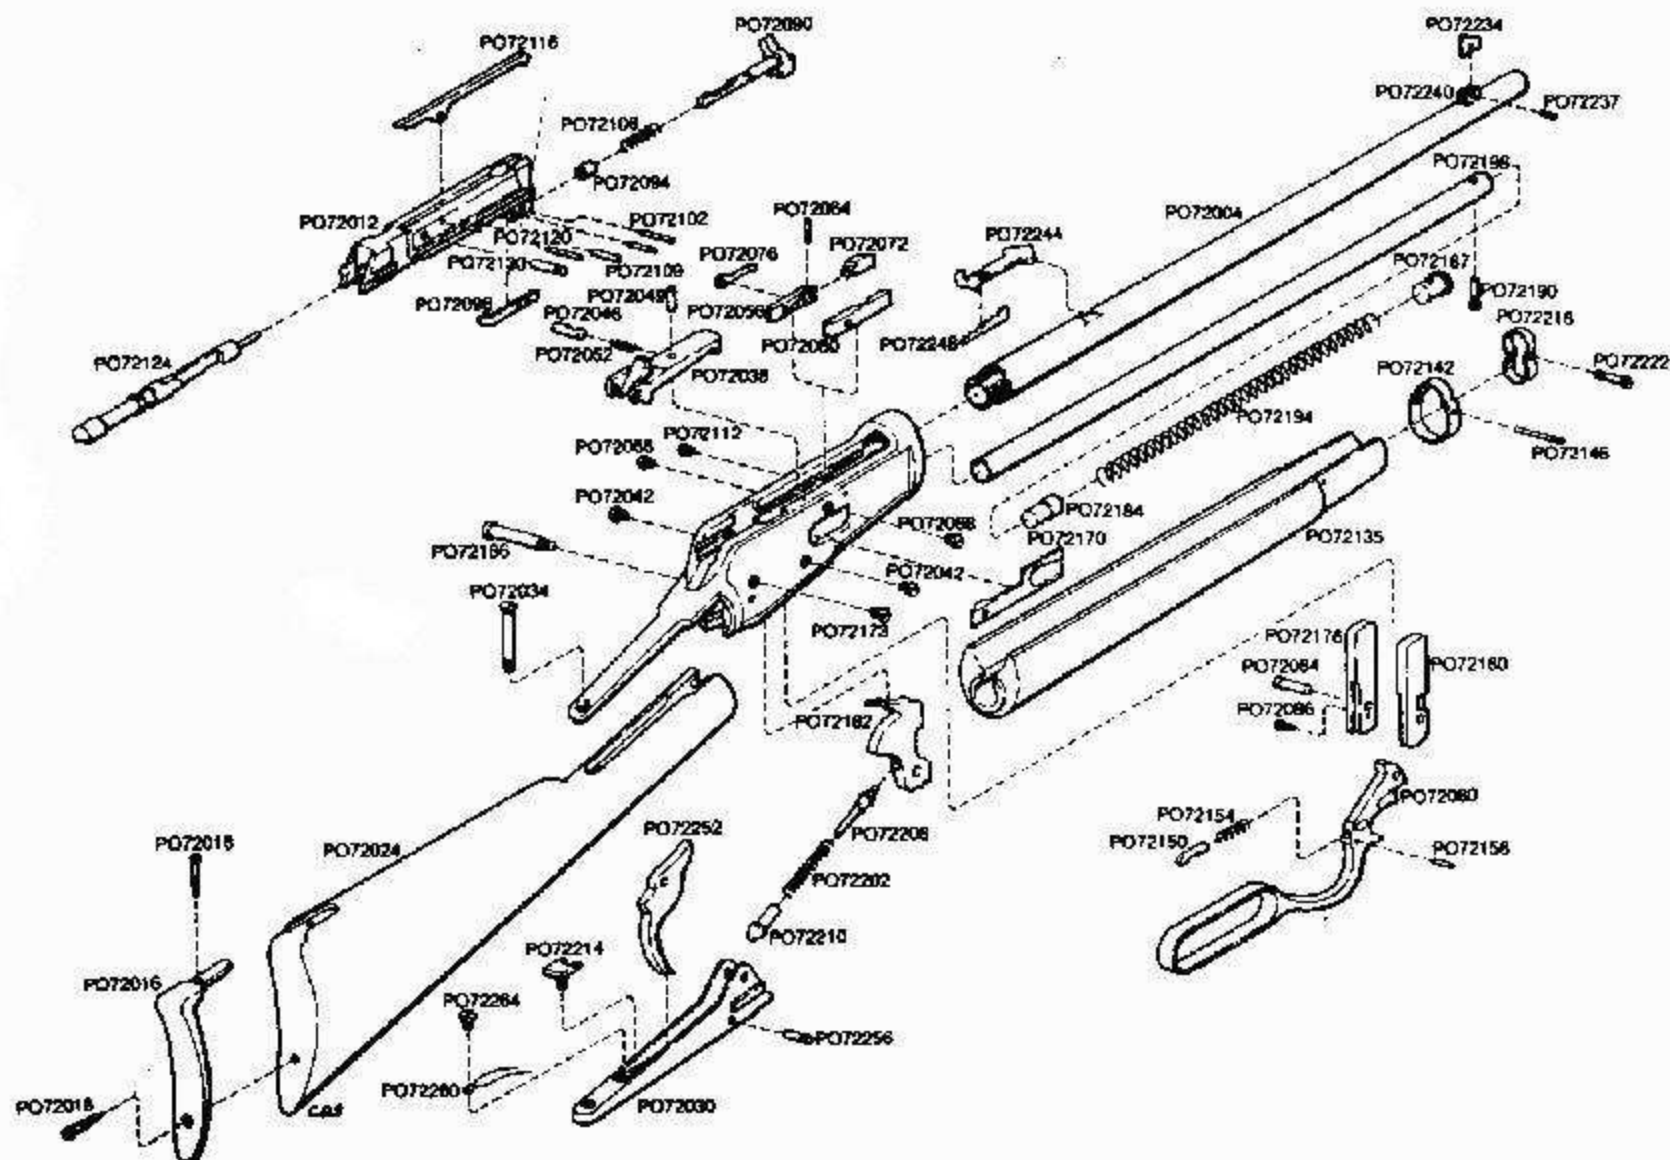

P072004 Barrel
P072012 Breech Bolt
P072016 Buttplate
P072018 Buttplate Screws-(2)
P072024 Buttstock
P072030 Buttstock Lower Tang
P072034 Buttstock Tang Screw
P072038 Carrier
P072042 Carrier Screw
P072046 Carrier Striker
P072049 Carrier Striker Pin
P072052 Carrier Striker Spring
P072056 Cartridge Guide, Left
P072060 Cartridge Guide, Right
P072064 Cartridge Guide Screw
P072072 Cartridge Stop
P072076 Cartridge Stop Spring
P072080 Cocking Lever
P072084 Cocking Lever Pin
P072088 Cocking Lever Stop Screw
P072090 Ejector

P072094 Ejector Collar
P072098 Ejector Collar Stop
P072102 Ejector Collar Stop Pin
P072106 Ejector Spring
P072108 Ejector Stop Pin
P072112 Ejector Stop Pin Plug Screw
P072116 Extractor
P072120 Extractor Pin
P072124 Firing Pin
P072130 Firing Pin Stop Pin
P072135 Fore-end
P072142 Fore-end Band
P072146 Fore-end Band Pin
P072150 Friction Stud
P072154 Friction Stud Spring
P072158 Friction Stud Stop Pin
P072162 Hammer
P072166 Hammer Screw
P072170 Loading Gate Cover
P072173 Loading Gate Cover Screw
P072176 Locking Bolt, Left

P072180 Locking Bolt, Right
P072184 Magazine Follower
P072187 Magazine Plug
P072190 Magazine Plug Screw
P072194 Magazine Spring
P072198 Magazine Tube
P072202 Mainspring
P072206 Mainspring Guide, Inner
P072210 Mainspring Guide, Outer
P072214 Mainspring Guide Stud
P072218 Muzzle Clamp
P072222 Muzzle Clamp Screw
P072234 Sight Blade, Front
P072237 Sight Blade Pin
P072240 Sight Body, Front
P072244 Rear Sight
P072248 Rear Sight Elevator
P072252 Trigger
P072256 Trigger Pin
P072260 Trigger Spring
P072264 Trigger Spring Screw